

TEMPLATE T-483

Effective date: October 1, 2024
Supercedes: All Previous


NOT TO SCALE

ROCKWOOD®

ASSA ABLOY

Experience a safer
and more open world

ROCKWOOD 483 DOOR STOP

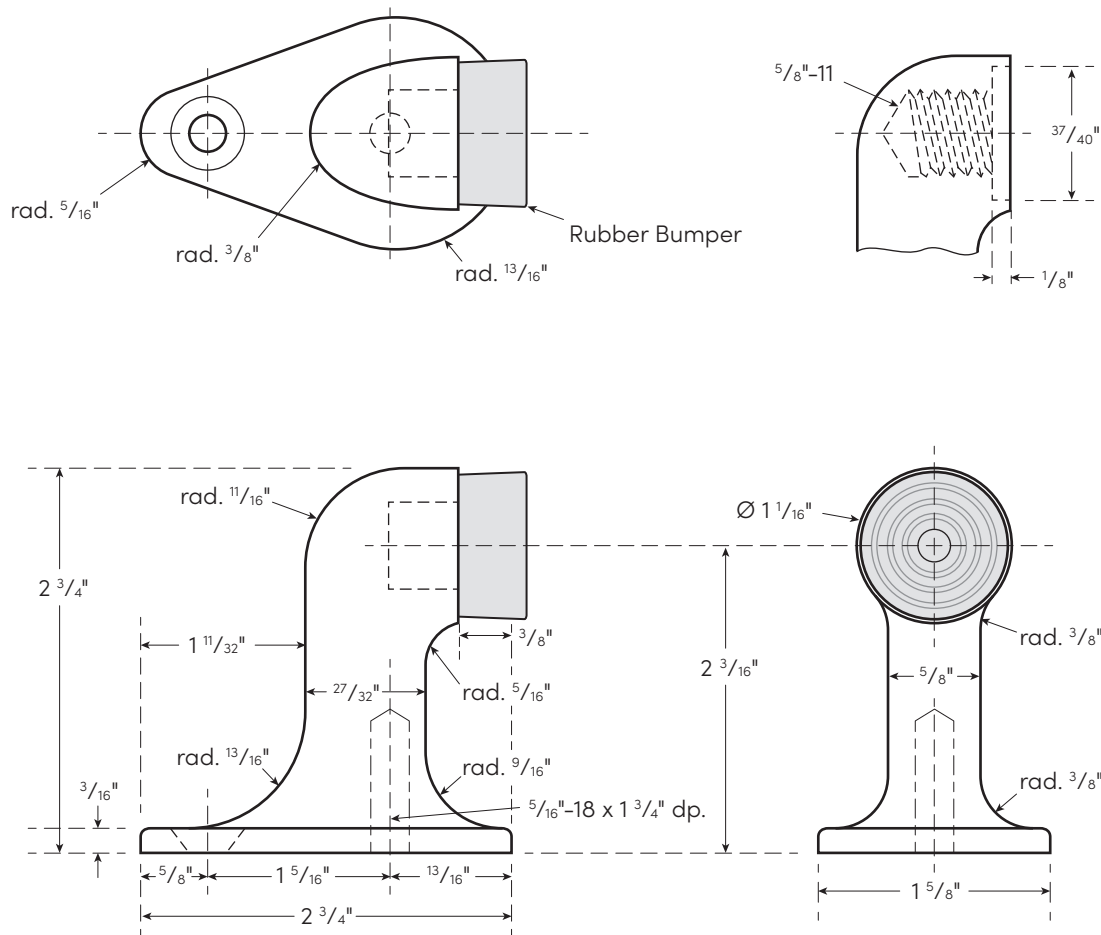

MATERIAL:

Solid Cast Brass with Rubber Bumper

FASTENERS NOTE:

$\frac{5}{16}''-18 \times 1 \frac{3}{4}''$ Stud, Anchor (Prep for Anchor - $\frac{5}{8}''$ drill bit);
#12 x $1 \frac{1}{4}''$ Flat Head Wood Screws Plastic Anchors

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.