


TEMPLATE
 T-491

Effective date: March 28, 2025
 Supersedes: All Previous

NOT TO SCALE

Experience a safer
 and more open world

ROCKWOOD 491-RKW AUTOMATIC DOOR STOP & HOLDER

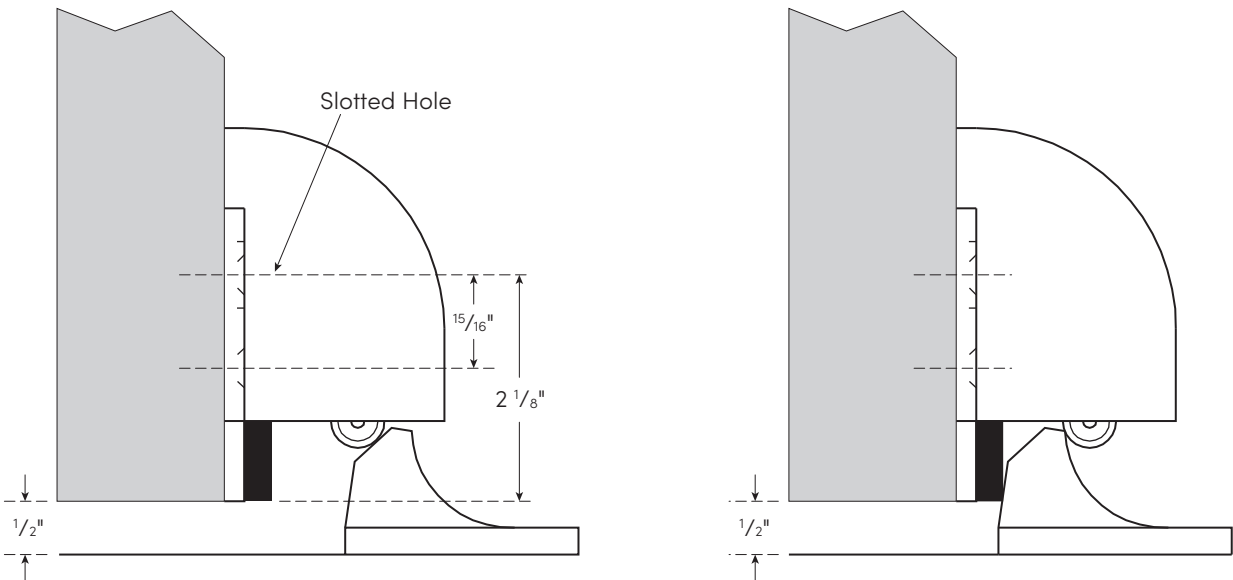

FASTENERS

#491 - (three) #12 x 1 1/4" Flat Head Wood Screws, (three) Plastic Anchors and (four) #10 X 1 1/4" Flat Head Wood Screws.

#491R - (three) #12-24 x 1" Flat Head Machine Screws, (three) Anchors and (four) #10 X 1 1/4" Flat Head Wood Screws.

#491S - (three) #12 x 1" Flat Head Machine Screws, (three) Anchors, (four) #10 X 1" Flat Head Machine Screws and (four) #10-24 X 1 3/8" Sex Bolts.

The #491 is intended for doors with 1/2" clearance under the door.

WARNING
 This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

DRILL SIZE CHART		
#12 Wood Screw	9/64" Soft Wood	5/32" Hard Wood
#10 Wood Screw	1/8" Soft Wood	9/64" Hard Wood
#12 Plastic Anchor	9/32"	
#12 Anchor	1/2"	
#10 Sex Bolt	5/16"	

NOTE: Special order risers are available in situations where there is more than 1/2" clearance.