

Pemko Commercial Threshold

The global leader in
door opening solutions


Applies to the following products:

1715, 1716, 1717, 1718, 1719


Installation Instructions:

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops.
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

Top (plan) view of door opening (out-swing type)

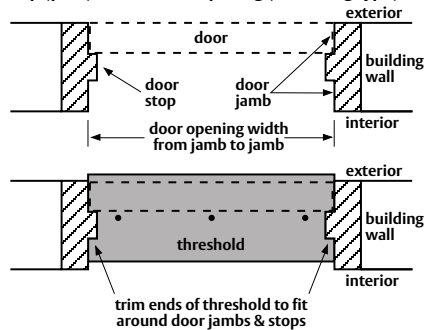

Tools Required:



Testing/Ratings:



Non-slip only
with AK finish