

Architectural Door Accessories

ASSA ABLOY

Pemko Threshold - Hospitality

The global leader in
door opening solutions


Applies to the following products:

EV232, EV2320, EV2322, EV2325, EV2326


Installation Instructions:

1. Measure door opening at the sill by measuring frame rabbet to frame rabbet.
2. Transfer measurement to threshold.
3. Cut the threshold to length. Notch corners of threshold to fit around the stop on the door frame as necessary.
4. Trial fit the threshold to verify proper fit. Cut down as necessary.
Note: If threshold is to be used with carpet, insert carpet into the threshold opening(s) before fitting the threshold into place at the sill.
5. Apply glue to concrete or plywood sub floors using readily available construction adhesives, such as Liquid Nails®

Top (plan) view of door opening (out-swing type)

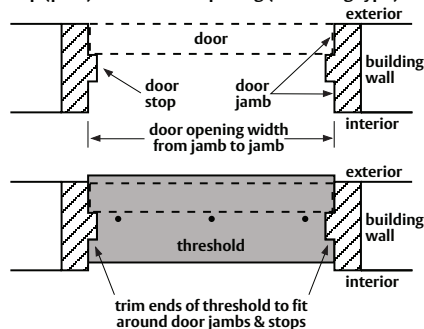

Tools Required:



Testing/Ratings:

Gasketing material for fire doors intended for application to listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3 hours; wood and plastic covered composite type fire doors rated up to 1-1/2 hours; and wood core type fire doors rated up to 20 minutes.
(Thresholds may or may not contain gasketing material).



www.pemko.com

MEMPHIS, TN USA P: 800 824-3018 F: 800 243-3656	VENTURA, CA USA P: 800 283-9988 F: 800 283-4050	VANCOUVER, BC CA P: 877 535-7888 F: 877 535-7444	TORONTO, ON CA P: 877 535-7888 F: 877 535-7444
---	---	--	--

Copyright © 2018 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

CT35_WEBINS
Rev 1 - 08.07.18
Page 1 of 1